
**Decal Placement Instruction Left Side**

Step1: Position the wordmark 5cm from the top rail and 5 cm from the front rail.

Step 2: Position the descriptor 10cm below the word mark and align the "E" with wordmark as shown.

Step 3: Center the URL horizontally on the cab door and slightly below the window as shown

Step 4: Position the phone number slightly below the URL, align both sides of the URL as shown.

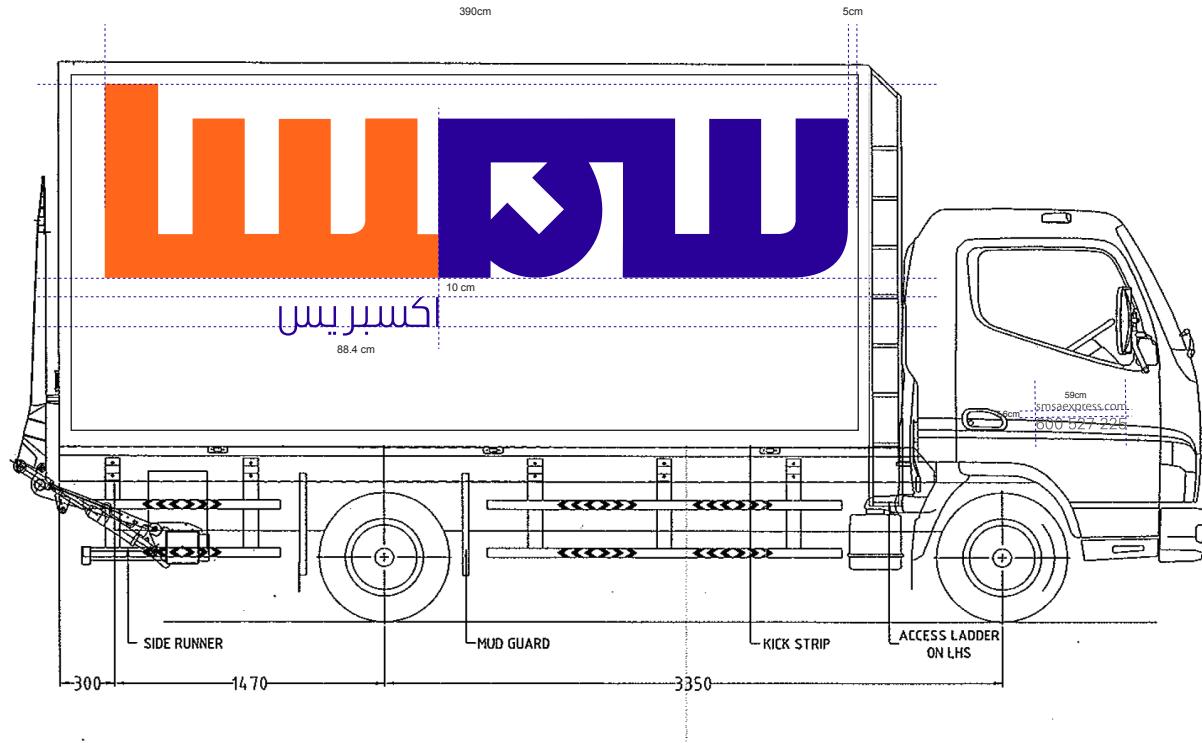

Decal Placement Instruction Right Side

Step1: Position the wordmark 5cm from the top rail and 5 cm from the front rail.

Step 3: Center the URL horizontally on the cab door and slightly below the window as shown

Step 2: Position the descriptor 10 cm below the word mark and align the "E" with wordmark as shown.

Step 4: Position the phone number slightly below the URL, align both sides of the URL as shown.



Decal Placement front Side



Decal Placement rear Side